

Getting started

1.




Remove wrist rest

Make sure your RollerMouse Red is unplugged. Remove the short wrist rest if still attached, by using the key that came with your RollerMouse. Insert the key into the slot next to arrow on bottom of RollerMouse Red. Turn in direction of arrow to release the short wrist rest at each end. Separate the units.



Slide the underarmsupport onto desk

Slide your underarmsupport with brackets attached onto your desktop. Adjust placement as needed by sliding thumb screws up and down the metal track. Tighten slightly.

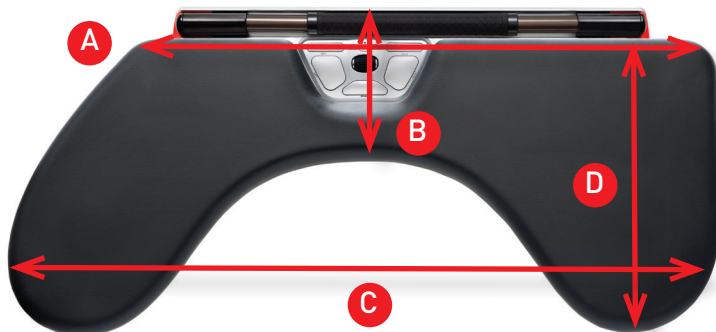

2.

Attach brackets

Turn the ArmSupport Red upside down on a flat surface. Loosely attach the brackets to the ArmSupport Red by using the thumb screw in the hole in the small arch in the bracket.



4.

Slide the RollerMouse Red in

Align RollerMouse Red in the space between the underarmsupport and your keyboard. Tighten the thumb screws until the underarmsupport is fully secure. Attach keyboard risers and plug your RollerMouse Red in. Your underarmsupport is now ready to use.

Technical specifications

A. Width	49 cm
B. Depth (with RollerMouse Red)	13,5 cm
C. Width	60 cm
D. Depth	25,5 cm
Material on Armsupport Red	Disinfectable leatherette
Warranty	2 years from date of purchase